

Door Locks

n Locking the vehicle from inside

► Inside lock button



- 1 Locks
- 2 Unlocks

► Door lock switch



Operates all door locks.

- 1 Locks
- 2 Unlocks

n Locking the vehicle from outside

► Using the entry function or wireless remote control (→P.8, 9)

n Rear door child-protector lock



Setting the switch to the LOCK position prevents the rear doors from being opened from the inside.

Power Windows



1 Power window switches

To open: press the switch.

To close: pull the switch up.

Fully pulling up and releasing the switches causes the windows to close fully. Fully pressing down and releasing the switches causes the windows to open fully.

2 Window lock switch

The window lock switch disables the operation of all windows other than the driver's door window.

Moon Roof*

n Opening and closing



1 Open

Stops just before it is opened fully. Press the switch again to fully open.

2 Close

To stop partway, press the switch lightly.

n Tilt up and down



1 Tilt up

2 Tilt down


To stop partway, press the switch lightly.

*: If equipped

Fuel Tank Cap



1 Press the fuel filler door opener.

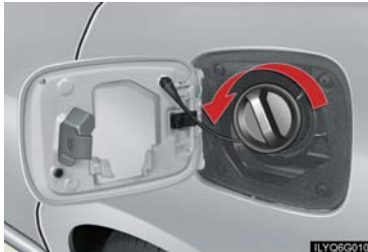

2 Slowly remove the cap by turning it counter-clockwise.

Hood



1 Pull the hood lock release lever.




2 Insert your fingers under the hood, pull the hood catch and lift the hood.

Trunk

n Trunk opener



To open the trunk from inside the cabin, simply press the trunk opener.

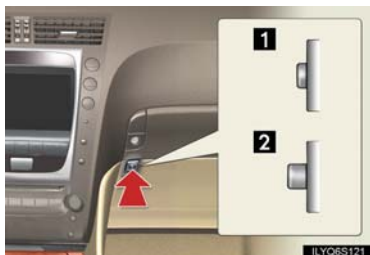

To disable the trunk opener, turn OFF the main switch in the glove box.

- 1 ON
- 2 OFF

When the trunk opener is disabled, the trunk cannot be opened using the entry function or the wireless remote control.

n Entry function and wireless remote control

→P.8, 9